

# CẤU HÌNH ĐẦU GHI GỞI CẢNH BÁO QUA EMAIL

\*\*\* & \*\*\*

The screenshot shows the 'Configuration' tab with the 'Email' sub-tab selected. The settings are as follows:

- Sender: co trom
- Sender's Address: sontunghikvision@gmail.com
- SMTP Server: smtp.gmail.com
- SMTP Port: 587
- Enable SSL
- Attached Image
- Interval: 2 s
- Authentication
- User Name: sontunghikvision@gmail.com
- Password: [masked]
- Confirm: [masked]


The 'Receiver' table is shown below:

No.	Receiver	Receiver's Address	Test
1	test email	sontungoctv@gmail.com	Test
2			Test
3			Test


A 'Save' button is located at the bottom of the configuration area.

1. Sử dụng email **Gmail** để gửi email (vì chúng ta dùng SMTP server của Gmail). Do đó, trong phần UserName, Password/Confirm, chúng ta dùng thông tin tài khoản Email của Gmail.
2. Nhớ **Enable SSL** (vì Gmail server bắt buộc) và SMTP Port cổng **587**.

\*Bật Event “ Enable Motion Detection “

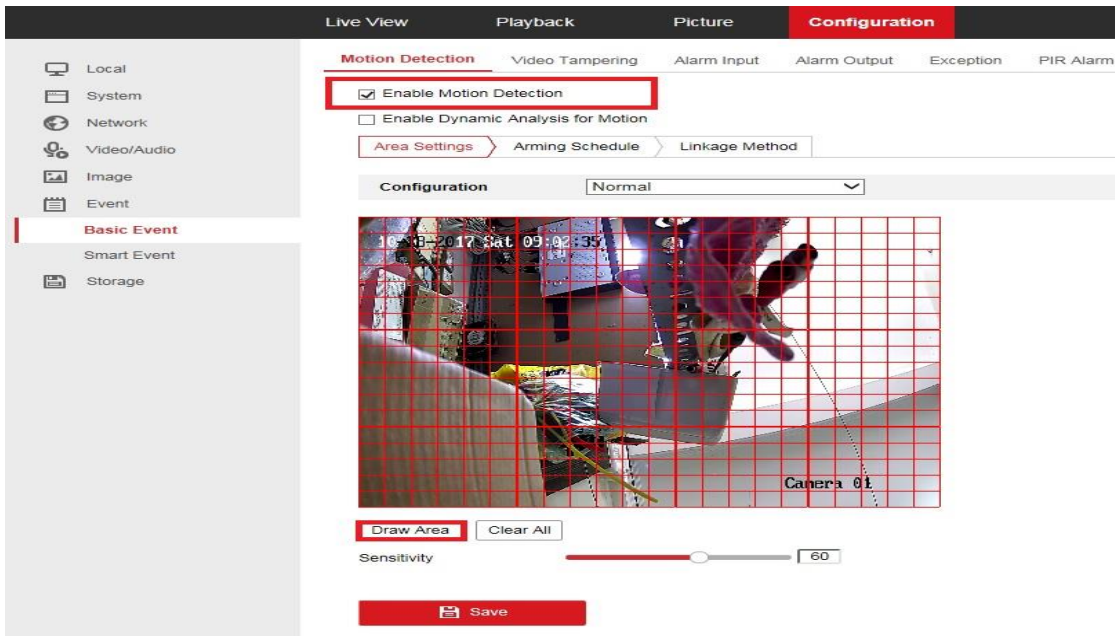

\*Chọn kiểu gửi cảnh Báo

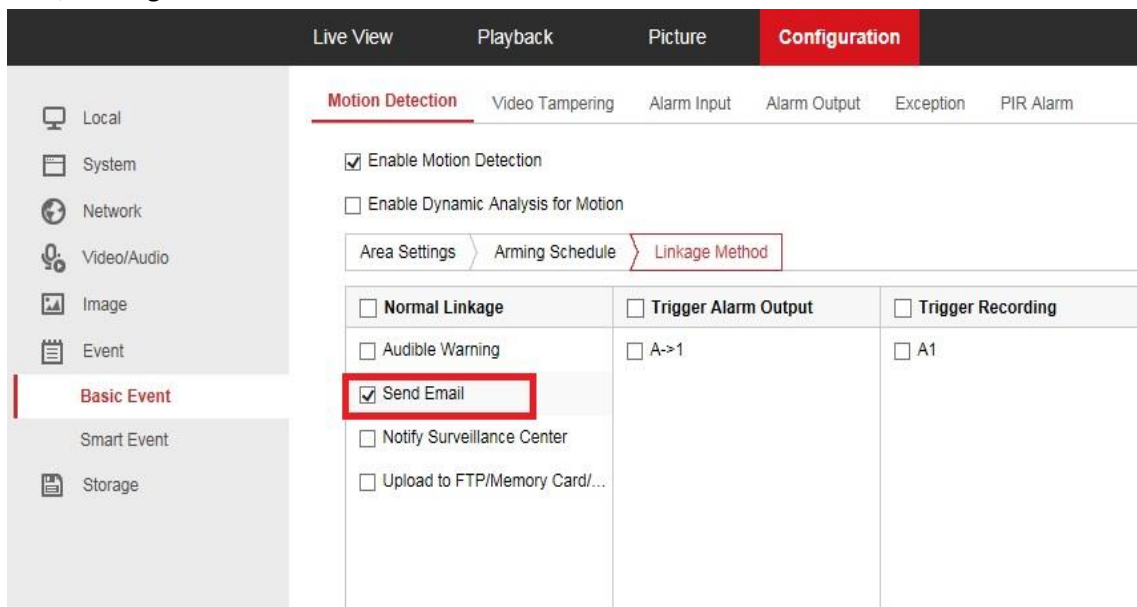

## \* Cấu hình gợi cảnh báo Gmail nên Bật tính năng kém an toàn

<https://support.google.com/accounts/answer/6010255?hl=en>

### Change account access for less secure apps

To help keep Google Accounts through work, school, or other groups more secure, we block some less secure apps from using them. If you have this kind of account, you'll see a "Password incorrect" error when trying to sign in. If so, you have two options:

- **Option 1:** Install a more secure app that uses stronger security measures. All Google products, like Gmail, use the latest security measures.
- **Option 2:** Change your settings to allow less secure apps into your account. We don't recommend this option because it can make it easier for someone to break into your account. If you want to allow access anyway, follow these steps:
  1. Go to the "Less secure apps" section of my Account [↗](#).
  2. Turn on **Allow less secure apps**. (Note: If your administrator has locked less secure app account access, this setting is hidden.)

### ← Ứng dụng kém bảo mật hơn

Một số ứng dụng và thiết bị sử dụng công nghệ đăng nhập kém an toàn hơn, việc này làm cho tài khoản của bạn dễ bị tấn công hơn. Chúng tôi khuyên bạn nên **tắt** quyền truy cập cho các ứng dụng này hoặc **bật** quyền truy cập nếu bạn muốn sử dụng các ứng dụng này bất chấp rủi ro. [Tìm hiểu thêm](#)

Cho phép ứng dụng kém an toàn: **BẬT**

